

# SAFETY BRIEFING SHEET

## Pastikan Penggunaan *Serviceable Gasket* pada Pressurization System

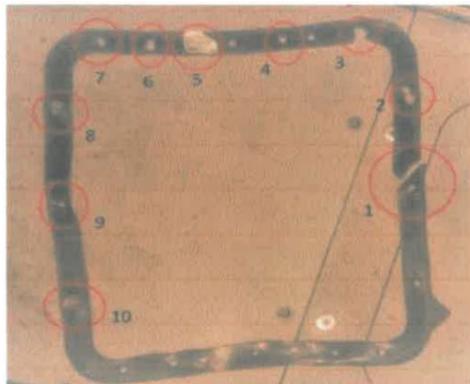


Figure 1. Damage FWD Outflow Valve Gasket of PK-GPF

Terdapat kejadian *Loss of Cabin Pressure* pada pesawat Airbus A330 Garuda Indonesia dengan registrasi PK-GPF sebagai GA-972 sector BTJ-JED tanggal 2 April 2019 saat melintasi Sri Lanka pada FL 380, sehingga PIC memutuskan untuk melakukan pendaratan darurat di *Bandaranaike International Airport* (BIA).

Sebelum terjadi event tersebut, pada tanggal 1 April 2019 dilakukan penggantian *Forward Outflow Valve Gasket* di *station DPS* sebagai tindak lanjut *repetitive PIREPs on CAB PR SYS 1 FAULT*.

Hasil Investigasi menunjukkan bahwa kegagalan *Pressurization System* pada PK-GPF disebabkan *leaks through seriously damaged gasket* seperti yang terlihat di figure 1.

### Lesson Learn:

Kita tahu bahwa *incident* tidak hanya akan berdampak terhadap aspek operasional akan tetapi juga aspek finansial hingga aspek keselamatan. Untuk mencegah *incident* ini terjadi kembali, selalu perhatikan hal-hal berikut:

1. Selalu membaca, memahami, mematuhi dan melaksanakan *Cautions*, *Warnings*, dan *Notes* seperti yang disebutkan dalam *Aircraft Maintenance Manual (AMM)*.
2. Tidak menggunakan *gasket* atau *seal* yang rusak/*damage*/kotor saat pelaksanaan *maintenance*.
3. Mematuhi AMM 21-31-51-000-801-A Subtask 21-31-51-020-050-A: ***Make sure that you do not damage the gasket*** pada saat melakukan penggantian *outflow valve*

SUBTASK 21-31-51-020-050-A  
 A. Removal of the Outflow Valve  
 (1) Remove the screws (6) and record their position for the installation procedure.  
 (2) Remove the screws (1), the washers (2) and the grd assy (3).  
 (3) FOR 313HL (FWD OUTFLOW VALVE)  
     Disconnect the electrical connectors 313HL1-A (7), 313HL5-A (8), 313HL2-A (9), 313HL6-A (22) and 313HL6-B (21).  
 (4) FOR 315HL (AFT OUTFLOW VALVE)  
     Disconnect the electrical connectors: 315HL1-A (7), 315HL5-A (8), 315HL2-A (9), 315HL6-A (22) and 315HL6-B (21).  
 (5) Put the CAP-BLANKING on each disconnected electrical connector and receptacle.  
 (6) Bonding Strap Installations  
**CAUTION: MAKE SURE THAT THE ELECTRICAL CONNECTOR(S) IS(ARE) DISCONNECTED BEFORE YOU DISCONNECT THE BONDING STRAP(S).**  
 (a) For Pre. P/N 20792 series outflow valves:  
     - Remove the nut (11), the washers (12), the bolt (15) and the bonding strap (13).  
 (b) For Post P/N 20792 series outflow valves:  
     - Remove the bolt (15), the washer (12) and the bonding strap (13).  
 (7) Remove the bolts (20) and the washers (19) from the outflow-valve electronic support-brackets.  
 (8) Removal of the valve:  
**WARNING: SUPPORT THE UNIT/ASSEMBLY CAREFULLY TO PREVENT INJURY TO PERSONS AND DAMAGE THE UNIT/ASSEMBLY.**  
 E.  
 THE UNIT/ASSEMBLY IS HEAVY.  
 (a) Lift the outflow valve (4) and remove it carefully from the inner side. Make sure that you do not damage the gasket (5).  
 NOTE: The outflow valve weighs approx. 12.5 kg (27.5578 lb).

Figure 2. AMM 21-31-51-000-801-A Subtask 21-31-51-020-050-A

**"Mari tingkatkan kepatuhan kita bersama untuk selalu mematuhi prosedur manual yang berlaku dan berhati-hati dalam melaksanakan pekerjaan."**

Referensi: Safety Circular JKTMQ-SC-70009-2021



Scan this barcode for feedback the SBS  
<https://bit.ly/TQY-SBS-030-2021>

Recipients can scan the code on a phone or tablet to access the form.